info@RebarSmachine.com

How to use automatic rebar bending machine GW40D and GW50D (manuals of GW40D and GW50D rebar bending machine)

 Before using the automatic rebar bending machine, so please read this operating manual carefully



Specification of automatic rebar bending machine

•

Machine Model	GW40D	GW50D
Round bar	Ø4mm-Ø40mm	Ø4mm-Ø50mm
Rebar	Ø4mm-Ø32mm	Ø4mm-Ø40mm
Motor Power	3Kw	4Kw
Motor Speed	1450RPM	1450RPM
GW/NW	420Kg/380Kg	450Kg/420Kg
Package Dimension	850*850*800mm	950*850*800mm

info@RebarSmachine.com


Fill machine oil

Open workbench cover, then fill machine oil through oil hole



Control panel introduction

- Green indicator: this is indicator of automatic mode, if the machine is working in automatic mode, the indicator will be light
- Touch startup buttons: the two buttons are startup buttons, they are available when the machine is working in manual mode,
- Mode switch: Automatic or Manual, you can switch it to mode that you need
- Reverse switch: this is power reverse switch
- GFW40D and GW50D are multifunctional,
- You can use it as automatic mode, automatic mode is better for angle degree presetting, and it is better for heavy duty repetition rebar bending works
- You can use it as manual mode, manual mode is auxiliary function, it's better for pieces of bending works

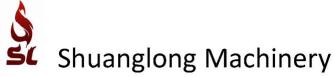

info@RebarSmachine.com

Commissioning

- Connect power line 380V three phase,
- If you use Automatic mode, touch footswitch for bending,
- If you use Manual mode, touch startup buttons for bending
- After commissioning, then you can go ahead with heavy duty works



info@RebarSmachine.com

How to set angle degree (in automatic mode and in manual mode)

- Automatic working mode: fix indexing pins into the holes (which angle degree you need),then touch footswitch, machine will bend rebar itself
- Manual mode: control angle degree manually by press startup buttons



Matters need attention

- Power source should meet machine power requirement, 380V three phase,
- If the machine power is customized, do it as customized power source
- You have to keep machine oil in proper level
- Operator has to use machine under its load capacity,
- You have to use machine in safety situation
- If operator is skilled, it will be better