



How to use an iron rod straightening machine YC16-25 (manual of YC16-25 iron rod straightening machine)

- Before using the iron rod straightening machine, please read this operating manual carefully




Specification of scrap bar straightening machine

- | | |
|---------------------|--------------|
| Machine Model | YC16-25 |
| Straight Capacity | Ø16mm-Ø25mm |
| Straightening Motor | 15Kw |
| Straightening speed | 20m/minute |
| GW/NW | 900Kg/850Kg |
| Package Dimension | 152*92*125cm |



Fill machine oil

- First of all, open oil hole cover on gears box, then fill 15kgs machine oil through oil hole, and contingent survey oil level

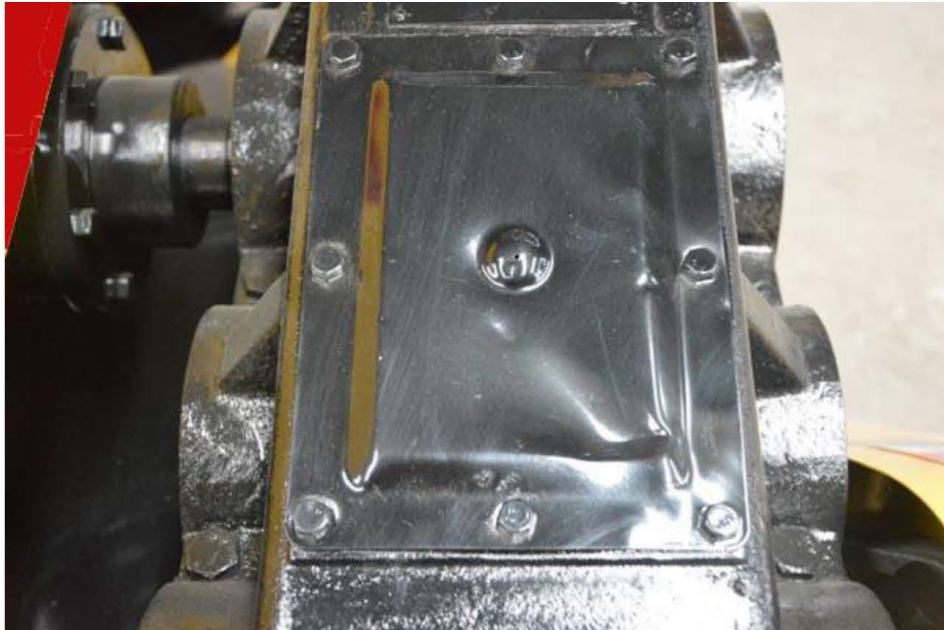

Commissioning

- Connect power line three phase, 8Kw, if you order a customized machine, do it as the power required,
- Since commissioning is ok, finally you can go ahead with heavy duty works



Wheels for compression roller

- Adjust it to a proper situation, not too tight and not too loose,
- Too tight, it will hard to pull rod into roller, and rod will be shape changing, not round
- Too loose, straight performance will be not good

